



 


Operation:

- Check the power of the load, ensure that the rated power of load does not exceed the rated power of the generator. If higher please use a generator with a higher output power.
- Turn the generator on by pressing the 'Power Switch' and allow 5 seconds for the output to stabilise.
- · Plug the equipment into the AC output.
- An long alarm will sound if the battery voltage is too low recharge battery fully (see below).
- · An alarm will also sound if the load is too high, this will stop the output. Ensure usage is within output limit.
- · After use, remove load and press the 'Power switch' to turn the generator off.

Charging:

- Using the supplied AC charger, connect to suitable supply and switch on. The display screen will show battery level and charging status.
- Do not recharge the generator while equipment is plugged into the generator.



IMPORTANT SAFETY INFORMATION:-

- To ensure heat dissipation, please make sure at least 5 cm space around the generator for smooth airflow.
- Never submerge in water.
- If you suspect the unit has water inside, do not use or attempt to recharge.
- Dropping the Generator may damage the battery or circuit components inside.
- IF THE GENERATOR HAS BEEN SUBMERGED IN WATER OR SUSTAINED DAMAGE IT COULD BE A FIRE HAZARD. DO NOT USE THE PRODUCT.
- Place outdoors in a non-combustible container well away from flammable materials. DO NOT RECHARGE THE BATTERY AND CONTACT NIGHTSEARCHER.
- Place the generator outdoors in a non-combustible container well away from flammable materials and contact: www.nightsearcher.co.uk /+44 (0)2392 389774.
- Always recharge the generator on a hard, flat, heat resistant surface.
- The battery will not reach optimum performance until 4-5 charging cycles
- Do not turn the generator off immediately after use, only turn off once the fan has stopped running.
- Avoid charging the battery in temperatures below 0°C or exposing the battery to temperatures below -5°C or above 40°C.
- Never use the charger if the leads, contacts or casings are damaged. Do not use any chargers other than those provided.
- Never expose the charger to rain, moisture or damp. If you suspect any of these have occurred then do not use the charger.
- Always check with your airline before attempting to transport by air.
- We recommend the generator is recharged every 3 months if not used for a long time.
- Do not shine the light directly into people's eyes, as it may damage their eyesight.
- Keep out of reach of children.
- In case of any problems or questions please contact NightSearcher Limited or an authorised distributor.

If at any time, you need to dispose of this product or parts of this product: please note that waste electrical products, bulbs and batteries should not be disposed of with ordinary household waste. Recycle where facilities exist. Check with your local authority for recycling advice. Alternatively, NightSearcher is happy to take receipt of this product at end-of-life and will recycle it on your behalf.



NightSearcher Limited Unit 4 Applied House, Fitzherbert Spur, Farlington, Portsmouth, Hampshire, PO6 1TT, UK

T: +44 (0)23 9238 9774 E: sales@nightsearcher.co.uk

W: nightsearcher.co.uk









All NightSearcher products have a 3 year standard warranty on all manufacturing defects and a 1 year warranty on all rechargeable batteries from the date of purchase.

For extended 5 year warranty please visit https://nightsearcher.co.uk/en/extended-warranty.html proof of purchase is required.

Product weight	15.5kg
Product size	408x311x166mm
	GENZERO-800W-230V GENZERO-800W-110V